



## FOS Luminus



# PRODUCT SPECIFICATIONS

## TECHNICAL SPECIFICATION

**Voltage:** 100/240 Volt AC, 50/60 Hz.

**Light Source:** 6x 10 Watt 6 in 1 LEDs (RGBWAUV).

**Beam Angle:** 25°.

**Control:** DMX512, stand alone, WiFi.

**DMX Channels:** 6 & 10 control channels.

**Protection Class:** IP20 (suitable for indoor use only)

**Battery:** Lithium with 8 hours operation in full ON

**Width:** 135 mm

**Depth:** 135 mm

**Height:** 198 mm

**Weight:** 2,5 Kg

## SAFETY WARNING



This product must be installed by a qualified professional. All maintenance must be carried out by a qualified electrician. A minimum distance of 0.5 m must be maintained between the equipment and a combustible surface. The product must always be operated in a well-ventilated area. DO NOT stare directly into the light source. Always disconnect the power before carrying out any maintenance. The earth must always be connected to the ground. Ensure that all parts of the equipment are kept clean and free of dust.

# PROTECTION AGAINST SOLIDS AND WATER

## Only for IP-rated fixtures

The protection level of a housing is set by applied standards. For classification there is used the IP-Code. It contains the declaration „IP“and two following numbers. The first number characterizes the protection against harmful effects of solids, the second is rating the water protection. It is important to distinguish whether encapsulation and harmful effect! There can be housing that is not capsuled completely but still avoids harmful effect of solids or water.

## PROTECTION EXAMPLES:

**IP20:** Protection against intruding objects >12,5mm „Finger protected “; No waterproofing. **TYPICAL PROTECTION FOR INDOOR USE FIXTURES**

**IP33:** Protection against intruding objects >2,5mm; Falling water within an angle of 60° has no harmful effect **TYPICAL PROTECTION OF LED-LIGHTS USING RECESSED POWERCON AND DMX SOCKET.** This protection is linked to the mounting position of the fixture and always refers to typical mounting situation like a Floor spot used standing on the ground.

**IP54:** complete protection against solids and low-pressure water from any side **THIS TYPE OF FIXTURES CAN BE USED UNDER NORMAL OUTDOOR CONDITIONS.**

**IP65:** shielded against dust and pressurized water from any side. **TYPICAL PROTECTION FOR OUTDOOR RATED EVENTFIXTURES USING WATERPROOFED POWER AND SIGNAL LINK.**

**IP67:** shielded against dust and protected for accidental briefly submerge. **PROTECTION AGAINST ACCIDENTAL SUBMERGING ON TEMPORARY FLOODED AREA.**

## TEMPORARY USE

Event equipment is designed for temporary use. This are typical purpose as concerts, festivals, theatre, clubs and disco use and referable venues. Long-term use, specially under outdoor conditions and fixed outdoor installation can bring damage in aging materials and affect the coated surface. Sealings as well as

cables are made from rubber material and will age by long-term UV-emission as sunlight and should be checked frequently.

## LIMITATIONS OF IP PROTECTION

IP-Rating doesn't mean unlimited outdoor use and protection against any kind of environmental influence! Especially sunlight and included UV will bring accelerated aging. Some fixtures need special parts or processes to fit the rated IP-Protection, like mounting covers or caps or similar. Sealings and other plastic or rubber materials are aging parts. They must be checked frequently to ensure the protection and safety of the fixtures. Also specified torque of screws can affect protection!

## Installation

**Hanging:** The fixture can be mounted in a hanging position using the supporting bracket. The bracket should be secured to the mounting truss or structure using a standard mounting clamp. Please note that when hanging the unit, a safety cable should also be used.

**UPRIGHT:** The fixture can be mounted in an upright or sitting position using the supporting brackets.



**NOTE!** If the signal cable is over 60 m between the DMX512 controller and fixture or between two fixtures, then a DMX signal amplifier is needed as well.

## Menu Screen

You can easily navigate through menu's options with the four buttons under the screen. Navigating in the menu is simple! With the Up / Down buttons, you are moving through menu's choices, pressing Enter, you are entering the sub menu of the option you have chosen, with the Up / Down buttons you're moving through the sub menu's options, with Enter, you are confirming your choice. The **FOS Battery WiFi** offers the following options:

**DMX512:** Set the DMX address.

**Shows:**

- Auto Color\*
- Auto Fade\*
- Auto Pulse\*
- Auto Strobe\*
- Wifi Mode: On / Off

*\* Press Enter and with Up & Down buttons adjust the speed of the mode.*

**Sound:**

- Sound Mode 1
- Sound Mode 2
- Sound Mode 3
- Sound Mode 4

*Press the Sound Mode of your choice and with the Up & Down buttons adjust the sound sensitivity.*

**Color:**

- **Custom Color:** Create the color of the choice, easily via this menu.
- **Static Color:** Choose among 32 preprogrammed colors.

**Set**

- **DMX Channel:** 10 / 6
- **2,4G Wireless:** On / Off
- **Infrared:** On / Off
- **Display backlight:** Adjust the intensity of the LCD background light.
- **LCD Close Time:** Select among five options (Open, 5S, 10S, 15S, 30S)
- **Fan Speed:** Auto / Slow / Middle / Fast
- **Restore Factory:** Yes / No (*Password 8888*)
- **Temperature:** Activates ore Deactivates the temperature indication on the LCD screen.
- **Battery:** On / Off
- **BackColor:** Changes the background color of the LCD screen.

**Help:** Shows information on the selected channel mode, firmware version, operational time, temperature.

# Channel Modes

## 6 Channel

1. Red
2. Green
3. Blue
4. White
5. Amber
6. Ultra Violet

Linear dimming from 0 – 100% in all the channels

## 10 Channels

1. Master Dimmer
2. Red
3. Green 4. Blue
5. White
6. Amber
7. Ultra Violet
8. Shutter
  - 0 – 8 Shutter Open.
  - 9 – 255 Gradual synched strobe from slow to fast.
9. Color Macros / Presets
  - 0 – 8 Off
  - 9 – 50 Static Color palette (In combination with channel 10)
  - 51 – 100 Dynamic Color palette with adjustable speed\*
  - 101 – 150 Color Pulses with adjustable speed\*
  - 151 – 200 Color Fade with adjustable speed\*
  - 201 – 220 Color change in sound mode

- **221 – 240** Strobing color in sound mode
- **241 – 255** Color pulsing in sound mode

*\*speed adjusted with channel 10*

#### 10. Color macros speed

## Control Via WiFi

- ✓ Download the application **LedHome** to your mobile, available for Android & iOS.
- ✓ On your Luminus, go to **SET** menu and activate the **WiFi** option (**2.4g Wireless**)
- ✓ Then, go in the **SHOWS** menu and activate the **WiFi mode**.
- ✓ On your mobile device, go to WiFi and find the network broadcasted by the Luminus projector. The network name will be **LED\_\*\*\*** (*where the \*\*\*, will be a 3-digit number*). Connect to this network.
- ✓ Start the **LedHome** application and start controlling your Luminus!

*See our video presentation for details.*

## General Information

### Replacing a fuse:

Always disconnect the fixture from main power before replacing a fuse. Use only the appropriate fuse, with the same type and rating. A fuse with different rating, can damage the fixture in case of failure.

### Risk of electric shock and / or fire:

The fixture must be earthed, supplied always with its nominal voltage and cleaned periodically from dust. For cleaning use only, a moist cloth. Never use liquids or force water. After cleaning, let the fixture dry before use.